









Reparatur-Anleitung  
Repair instruction

**BLANCO ALTA Compact HD**  
**BLANCO ALTA Compact ND**  
**BLANCO ALTA-F Compact HD**




# BLANCO



## BLANCO ALTA Compact

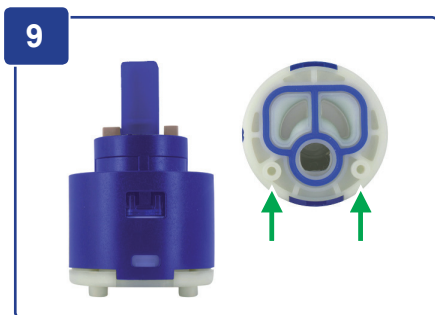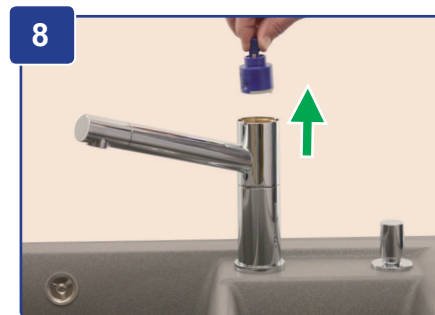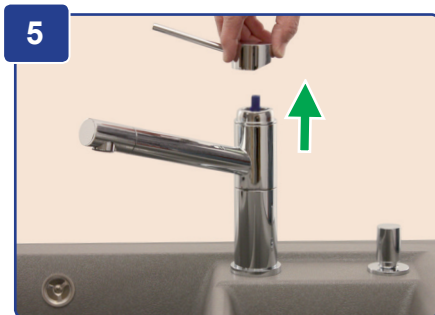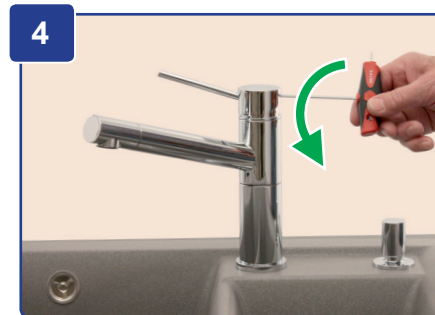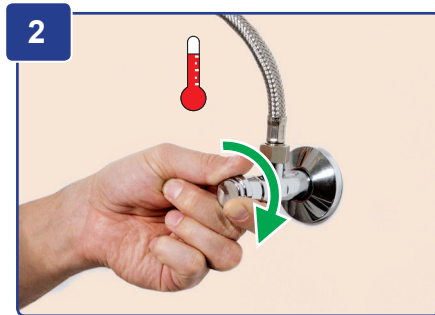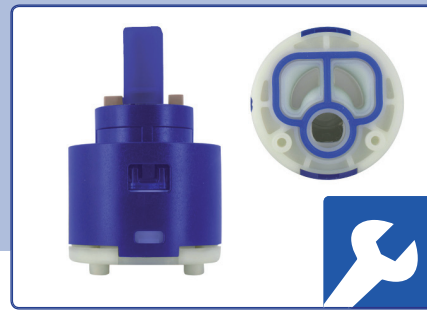

HD  
Art.-No. 118 787






ND  
Art.-No. 116 409

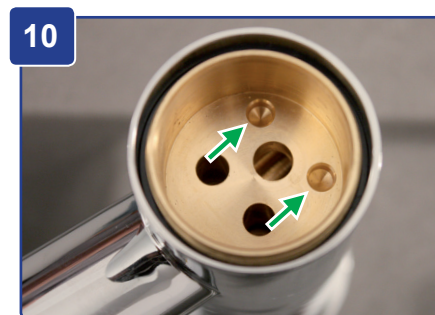


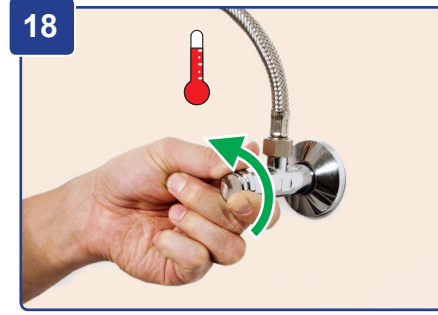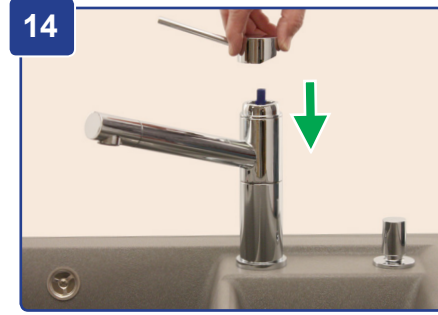


# BLANCO

## BLANCO ALTA Compact

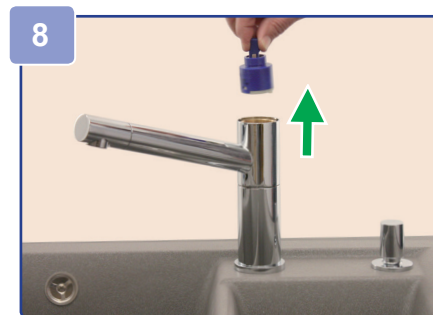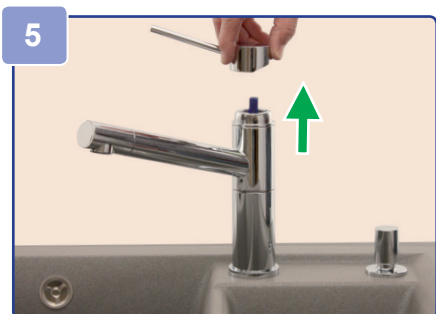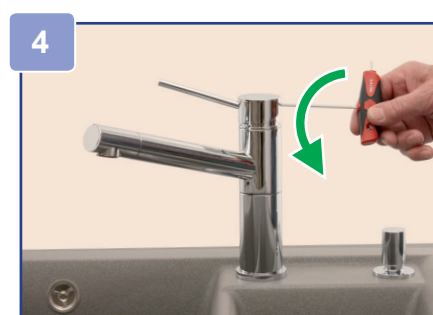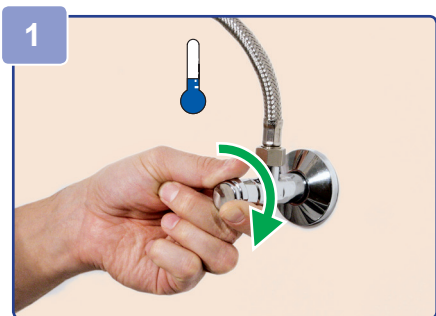
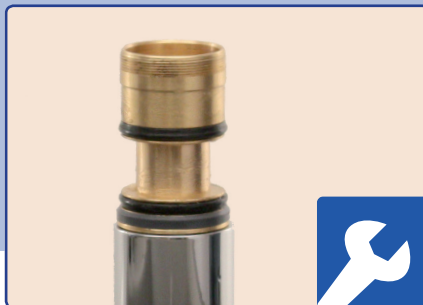


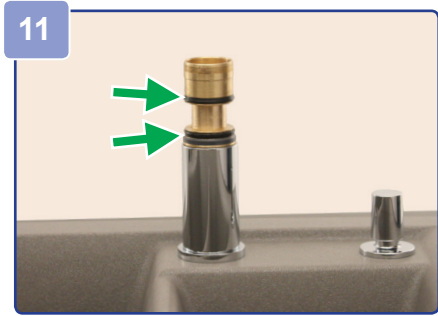

Art.-No. 128 600


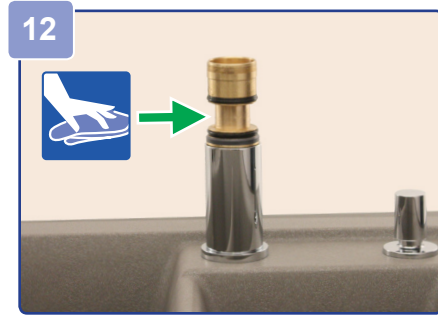


Art.-No. 117 933

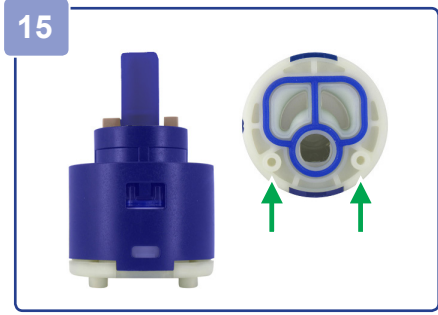
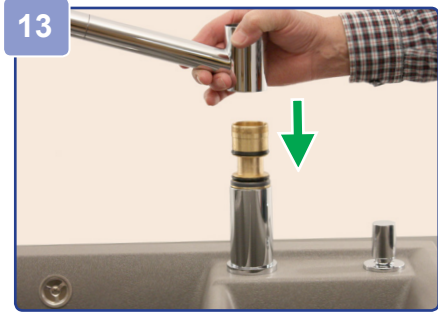


HD  
Art.-No. 118 787


ND  
Art.-No. 116 409

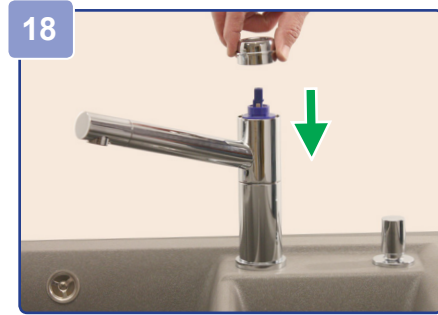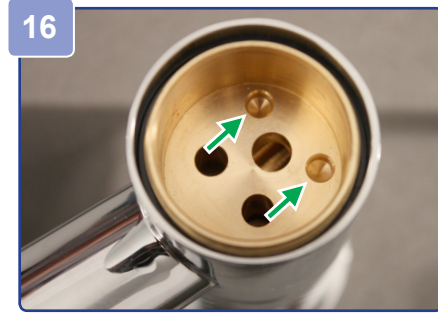


Art.-No. 139 219

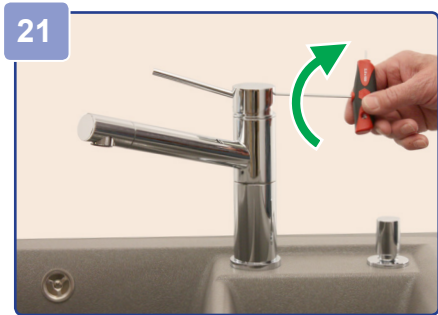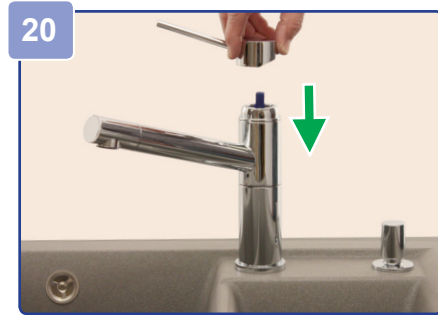

2,5 mm  
Art.-No. 139 188

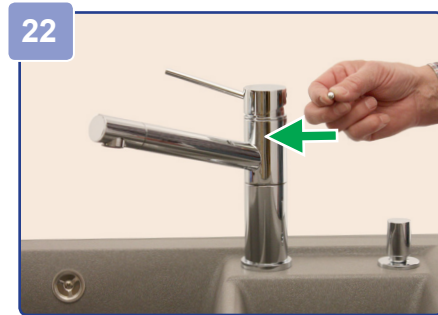

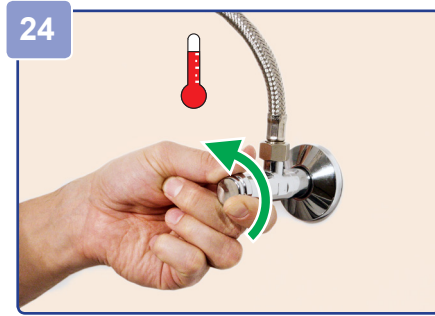

# BLANCO

## BLANCO ALTA Compact



Art.-No. 511 324

